



An inventory projecting into the future

Now standing as a national reference, the French inventory of radioactive waste, drawn up by ANDRA, has not only expanded to cover recoverable material but also features predictions of waste arisings for 2010 and 2020, including waste from the decommissioning of current installations. It further takes into account spent fuel discharged from power stations beyond 2020.



Containerization of products from the dismantling of Brennilis power station (Finistère département, Western France).

The French Act of 30 December 1991, even as it set up **ANDRA** as a self-standing government establishment, gave it the remit of “compiling an inventory of the state and location of all **radioactive waste** sited within the territorial limits of the country” (see *Radioactive waste management research: an ongoing process of advances*). From that time on, the Agency published, on a regular basis, an inventory of waste materials sited in France. ANDRA’s “Rapport de l’Observatoire” became, over the years, the French reference publication, in the field of radioactive waste inventory, made available to the public at large. This surveyed the various sites holding waste materials, of all types (see Box A, **What is radioactive waste?**), gradually expanding over time to cover new topics.

A number of protagonists, the National Review Board (**Commission nationale d’évaluation**) in particular, felt the scope of that work needed broadening. In 1999, the French government gave Yves Le Bars a brief to

submit all and any recommendations deemed useful to complement the inventory. After extensive consultation of the players involved in radioactive waste management (government departments, producers, NGOs), and a survey of extant inventories in other countries, the group suggested, in its report, that a new national inventory be drawn up, to provide both an overarching overview and detailed stocktaking, for each category, and present projections for the coming years, setting out future waste arisings from existing installations. The report further stressed the importance of including recoverable **radioactive** material.

The government called on ANDRA, in 2002, to produce such an inventory, to be funded by a multiannual grant awarded to the Agency. Work was then initiated, under the aegis of a steering committee, bringing together representatives from government (Ministries charged with Industry and the Environment, the French Nuclear Safety Authority [**Autorité de sécurité nucléaire**]), representatives from waste-producing industries, whether in the nuclear power sector or not (**CEA, Areva, EDF, Rhodia**), ANDRA, and, with observer status, representatives from the Parliamentary Office for the Assessment of Scientific and Technological Options (**Office parlementaire d’évaluation des choix scientifiques et technologiques**) and the National Review Board. The latter Committee validated the guidelines for compilation of the Inventory, monitored execution of the work, and validated the underlying overall data and assumptions.

The work involved questioning waste producers of all provenance (including small-scale producers: hospitals, universities, industry) as to waste stocks held by them as of 31 December 2002, on their planned destination, and the conditioning modes considered. The ensemble of these data was crosschecked over the various available sources, and fed into a central database. At the same time, a workgroup, bringing together producers and ANDRA, drew up predictions for waste arisings over the years 2010–20, including waste from the decommissioning of current installations, as well as spent **fuel** discharges from power stations from 2020 on. The first edition of the National Inventory of Radioactive Waste and Recoverable Material – the successor to the “Rapport de l’Observatoire” – was published on 22 November 2004. Presenting it to the press, the Minister for Industry emphasized the quality of the work carried out, and stressed his desire to see this procedure be carried forward in the future.

	nuclear power	research	defense	non-nuclear-power industry	total
HLW (0.2 %)	1,380	38	221	0	1,639
ILW-LL (4.6 %)	28,580	9,602	7,052	125	45,359
LLW-LL (4.6 %)	9,951	18,055	283	16,270	44,559
LILW-SL (79.5 %)	551,136	124,615	88,316	14,255	778,322
VLLW (11.1 %)	42,397	37,580	24,975	3,267	108,219
total (100 %)	633,444	189,890	120,847	33,917	978,098

Table 1.
Breakdown by category of industry of the overall waste volume present on French territory and subject to French management, i.e. excluding waste due to be returned to owners abroad (in equivalent conditioned cubic meters).

The Inventory published by ANDRA thus stands as one of the most complete, most easily accessible for the public at large, and on a par with those for the most advanced countries in this field: the United Kingdom, the United States, Belgium... It provides a common reference for all with respect to radioactive waste management.

The initial edition of the National Inventory of Radioactive Waste and Recoverable Material provides a complete panorama of radioactive waste, from a number of complementary standpoints: stocktaking by site, by waste type, by producer industry. It includes assessments of future trends, both as to volumes of waste produced, and the industrial treatment and **conditioning** processes producers are planning to use. No one document, until then, had drawn together all of these data in a form accessible to the wider public.

Findings from this survey show that waste may be described in terms of a manageable number of families, exhibiting homogeneous properties (about a hundred). These families, as a whole, may be assigned to some existing, or planned, waste management pathway, barring a few special cases, usually involving **low-level** or **very-low-level** waste, amounting to less than one thousandth of overall waste volume.

Waste materials, as a whole, are well known. Some older waste, originating from the first generations of nuclear installations, does however feature a poorer degree of characterization, this being set to improve with scheduled recovery and conditioning operations (see *Nuclear waste management and processing: between legacy and prediction*). Such operations are set out in the Inventory, and corresponding amounts of waste are taken into account.

The survey achieves better identification of producers from university hospital and research environments. Having no statutory regulatory powers, ANDRA relies on the statements returned by producers, as well as on investigations of its own. The Inventory sets out the list of those surveyed, and of – often very short-lived – **radionuclides** handled.

The main difficulties presented by the survey arise from specific items, often older objects. Used radioactive sources must in principle be recovered by the supplier, and some of these are already identified as waste. Radioactive items installed extensively – lightning rods, smoke detectors – do not present any health hazard, however they are hard to cover in an inventory in altogether exhaustive fashion. Other waste, such as older radium-bearing items for medical use, were collected through campaigns organized by **OPRI (the Office for Radioprotection against Ionizing Radiations)** and ANDRA; while the overall inventory is thus well known, individual items are forever liable to emerge. Finally, a list of 49 sites, radioactively contaminated and identified as such by government agencies, some of them

having already been cleaned up, is set out in the Inventory. This list may be altered, as and when new cases are identified in the future.

The Inventory presents waste stocktaking in terms of equivalent conditioned volume, a homogeneous accounting unit for all waste, taking in the volume of the package into which the producer has conditioned it, or is planning to condition it. Overall volume of waste present on French territory and subject to French management, i.e. excluding waste scheduled to be returned to owners abroad, stood, as of end December 2002, at 979,000 m³. Table 1 shows the breakdown of this waste by category of activity. Non-French waste stored at La Hague is presented separately.

Pathways already operational for 84% of waste

Waste catered for as of now by operational industrial pathways (**VLLW** and **LILW** disposal sites in the Aude *département*, see *Industrial solutions for all low-level waste*) account for 84% of overall volume. Aside from the already mentioned marginal cases, the remaining 16% is either covered by the research drive provided for by the Act of 30 December 1991, or catered for by the dedicated disposal program for **radium-bearing** and **graphite** waste (see Box A), or is subject to investigations by ANDRA, to assess whether it may be catered for within existing pathways.

Stocktaking is further shown by industry and economic sector. The former concept refers to the manufacturer producing or holding the waste: fuel-cycle industries, power plants, government and public-sector research establishments (including CEA), or private-sector establishments, hospitals, miscellaneous industries, research or production centers working for the nuclear deterrent force, armed forces, **storage** and **disposal** sites. The ensemble of such activities accounts for 856 sites, bearing in mind that the bulk of radio-

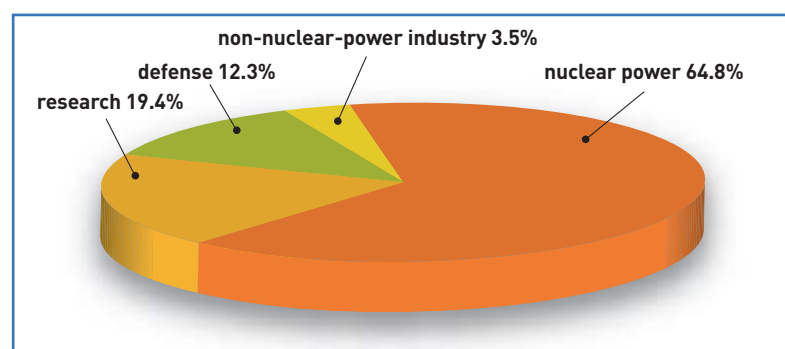


Figure 1.
Breakdown of waste by economic sector, assigning all waste to the industrial requirement giving rise to its production.



A What is radioactive waste?

According to the **International Atomic Energy Agency (IAEA)**, **radioactive waste** may be defined as “any material for which no use is foreseen and that contains **radionuclides** at concentrations greater than the values deemed admissible by the competent authority in materials suitable for use not subject to control.” French law in turn introduces a further distinction, valid for nuclear waste as for any other waste, between waste and final, or “ultimate,” waste (*déchet ultime*). Article L. 541-1 of the French Environmental Code thus specifies that “may be deemed as waste any residue from a process of production, transformation or use, any substance, material, product, or, more generally, any movable property left derelict or that its owner intends to leave derelict,” further defining as ultimate “waste, be it the outcome of waste treatment or not, that is not amenable to further treatment under prevailing technological and economic conditions, in particular by extraction of the recoverable, usable part, or mitigation of its polluting or hazardous character.”

Internationally, experts from IAEA and the **Nuclear Energy Agency (NEA)** – an OECD organization – as those in the **European Commission** find that long-lived waste produced in countries operating a nuclear power program is stored securely nowadays, whilst acknowledging a final solution is required, for the long-term management of such waste. They consider burial in deep geological structures appears, presently, to be the safest way to achieve final disposal of this type of waste.

What constitutes radioactive waste? What are the volumes currently involved?

Radioactive waste is classified into a number of categories, according to its level of radioactivity, and the radioactive **period**, or **half-life**, of the radionuclides it contains. It is termed **long-lived waste** when that period is greater than 30 years, **short-lived waste** otherwise. The French classification system involves the following categories:

- **very-low-level waste (VLLW)**; this contains very small amounts of radionuclides, of the order of 10–100 Bq/g (**becquerels** per gram), which precludes considering it as conventional waste;
- **short-lived low and intermediate level waste (LILW-SL)**; radioactivity levels for such waste lie as a rule in a range from

a few hundred to one million Bq/g, of which less than 10,000 Bq/g is from long-lived radionuclides. Its radioactivity becomes comparable to natural radioactivity in less than three hundred years. Production of such waste stands at some 15,000 m³ per year in France;

- **long-lived low-level waste (LLW-LL)**; this category includes radium-bearing waste from the extraction of **rare earths** from radioactive ore, and graphite waste from first-generation reactors;

- **long-lived intermediate-level waste (ILW-LL)**, this being highly disparate, whether in terms of origin or nature, with an overall stock standing, in France, at 45,000 m³ at the end of 2004. This mainly comes from **spent fuel** assemblies (cladding **hulls** and **end-caps**), or from operation and maintenance of installations; this includes, in particular, waste conditioned during spent fuel reprocessing operations (as from 2002, this type of waste is compacted, amounting to some 200 m³ annually), **technological waste** from the operation or routine maintenance of production or fuel-processing plants, from nuclear reactors or from research centers (some 230 m³ annually), along with sludges from effluent treatment (less than 100 m³ annually). Most such waste generates little heat, however some waste of this type is liable to release gases;

- **high-level waste (HLW)**, containing **fusion products** and **minor actinides** partitioned during spent fuel reprocessing (see Box B), and incorporated at high temperature into a glass **matrix**. Some 120 m³ of “nuclear glass” is thus cast every year. This type of waste bears the major part of radioactivity (over 95%), consequently it is the seat of considerable heat release, this remaining significant on a scale of several centuries.

Overall, radioactive waste conditioned in France amounts to less than 1 kg per year, per capita. That kilogram consists, for over 90%, of LILW-SL type waste, bearing but 5% of total radioactivity; 9% of ILW-LL waste, less than 1% HLW, and virtually no LLW-LL waste.

What of the waste of tomorrow?

From 1991, **ANDRA** compiled, on a yearly basis, a geographical inventory of waste present on French territory. In 2001, ANDRA was asked by government to augment this “National Inventory,” with the threefold aim of characterizing extant stocks (state of conditioning, processing

traceability), predicting future waste production trends to 2020, and informing the public (see *An inventory projecting into the future*). ANDRA published this reference National Inventory at the end of 2004. To meet requirements for research in compliance with the directions set out in the French Act of 30 December 1991 (see *Radioactive waste management research: an ongoing process of advances*), ANDRA, in collaboration with waste producers, has drawn up a Dimensioning Inventory Model (MID: Modèle d’inventaire de dimensionnement), for the purposes of arriving at estimates of the volume of waste packages to be taken on board in research along direction 2 (**disposal**). This model, including as it does predictions as to overall radioactive waste arisings from the current reactor fleet, over their entire lifespan, seeks to group waste types into families, homogeneous in terms of characteristics, and to formulate the most plausible hypotheses, with respect to conditioning modes, to derive the volumes to be taken on board for the purposes of the investigation. Finally, MID sets out to provide detailed stocktaking, intended to cover waste in the broadest possible fashion. MID (not to be confused with the National Inventory, which has the remit to provide a detailed account of actual waste currently present on French territory) thus makes it possible to bring down the variety of package families to a limited number of representative objects, and to specify the requisite margins of error, to ensure the design and assessment of disposal safety will be as robust as feasible, with respect to possible future variations in data.

To ensure consistency between investigations carried out in accordance with direction 2 and those along direction 3 (**conditioning and long-term storage**), CEA adopted MID as input data. MID subsumes waste packages into standard package types, then computes the number and volume of HLW and ILW-LL packages, according to a number of scenarios, all based on the assumption that current nuclear power plants will be operated for 40 years, their output plateauing at 400 **TWhe** per year.

Table 1 shows the numbers and volumes for each standard package type, for the scenario assuming a continuation of current strategy, with respect to spent fuel reprocessing: reprocessing of 79,200 **UOX** fuel **assemblies** and storage of 5,400 **MOX**

MID standard package types	Symbols	Producers	Categories	Number	Volume (m ³)
Vitrified waste packages	C0 — C2	Cogema*	HLW	42,470	7,410
Activated metal waste packages	B1	EDF	ILW-LL	2,560	470
Bituminized sludge packages	B2	CEA, Cogema*	ILW-LL	105,010	36,060
Cemented technological waste packages	B3	CEA, Cogema*	ILW-LL	32,940	27,260
Cemented hull and end-cap packages	B4	Cogema*	ILW-LL	1,520	2,730
Compacted structural and technological waste packages	B5	Cogema*	ILW-LL	39,900	7,300
Containerized loose structural and technological waste packages	B6	Cogema*	ILW-LL	10,810	4,580
Total B				192,740	78,400
Total overall				235,210	85,810

* renamed Areva NC in 2006

Table 1.
Amounts (number, and volume) of waste packages, as predicted in France for 40 years' operation of the current fleet of reactors, according to ANDRA's Dimensioning Inventory Model (MID).

assemblies discharged from the current PWR fleet, when operated over 40 years.

What forms does it come in?

Five types of generic packages (also found in MID) may be considered:

- **cementitious waste packages:** ILW-LL waste packages employing hydraulic-binder based materials as a conditioning matrix, or as an immobilizing grout, or yet as a container constituent;
- **bituminized sludge packages:** LLW and ILW-LL waste packages, in which bitumen is used as confinement matrix for low- and intermediate-level residues from treatment of a variety of liquid effluents (fuel processing, research centers, etc.);
- **standard compacted waste packages** [CSD-C: *colis standard de déchets compactés*): ILW-LL packages obtained through compaction conditioning of structural waste from fuel assemblies, and technological waste from the La Hague workshops;
- **standard vitrified waste packages** [CSD-V: *colis standard de déchets vitrifiés*):

HLW packages, obtained mainly through vitrification of highly active solutions from spent fuel reprocessing;

- spent fuel packages: packages consisting in nuclear fuel assemblies discharged from reactors; these are not considered to be waste in France.

The only long-lived waste packages to be generated in any significant amounts by current electricity production (see Box B) are vitrified waste packages and standard compacted waste packages, the other types of packages having, for the most part, already been produced, and bearing but a small part of total radioactivity.

What is happening to this waste at present? What is to be done in the long term?

The goal of long-term radioactive waste management is to protect humankind and its environment from the effects of the materials comprised in this waste, most importantly from radiological hazards. Any release or dissemination of radioactive

materials must thus be precluded, through the lasting isolation of such waste from the environment. This management is guided by the following principles: to produce as little waste as practicable; limit its hazardous character as far as feasible; take into account the specific characters of each category of waste; and opt for measures that will minimize the burden (monitoring, maintenance) for future generations.

As for all nuclear activities subject to control by the French Nuclear Safety Authority (*Autorité de sûreté nucléaire*), fundamental safety regulations (RFSs: *règles fondamentales de sûreté*) have been drawn up with respect to radioactive waste management: sorting, volume reduction, package confinement potential, manufacturing method, radionuclide concentration. RFS III-2.f, in particular, specifies the conditions to be met for the design of, and demonstration of safety for an underground repository, and thus provides a basic guide for disposal investigations. Industrial solutions (see *Industrial solutions for all low-level waste*) are currently available for high on 85% (by volume) of waste, i.e. VLLW and LILW-SL waste. A solution for LLW-LL waste is the subject of ongoing investigation by ANDRA, at the behest of waste producers. ILW-LL and HLW waste, containing radionuclides having very long half-lives (in some cases, greater than several hundred thousand years) are currently held in storage installations coming under the control of the Nuclear Safety Authority. What is to become of this waste in the long term, beyond this storage phase, is what the Act of 30 December 1991 addresses (see Table 2).

For all of these waste types, the French Nuclear Safety Authority is drawing up a National Radioactive Waste Management Plan, specifying, for each type, a management pathway.

	Short-lived Half-life < 30 years for the main elements	Long-lived Half-life > 30 years
Very-low-level waste (VLLW)	Morvilliers dedicated disposal facility (open since 2003) Capacity: 650,000 m ³	
Low-level waste (LLW)	Aube Center (open since 1992) Capacity: 1 million m ³	Dedicated disposal facility under investigation for radium-bearing waste (volume: 100,000 m ³) and graphite waste (volume: 14,000 m ³)
Intermediate-level waste (ILW)		MID volume estimate: 78,000 m ³
High-level waste (HLW)	MID volume estimate: 7,400 m ³	

Table 2.
Long-term management modes, as currently operated, or planned, in France, by radioactive waste category. The orange area highlights those categories targeted by investigations covered by the Act of 30 December 1991.

■ (1) According to the Dimensioning Inventory Model (MID)



activity is concentrated at the two sites of La Hague and Marcoule. The second concept, that of “economic sector,” links all waste to an industrial requirement giving rise to its production; four sectors are thus defined: nuclear power generation, research (including nuclear power research) and medical, defense, and non-nuclear-power industry (see Figure 1).

Detailed predictions for 2010 and 2020

Investigations of future trends are a novel element of the Inventory. Detailed stock predictions were drawn up for 2010 and 2020. These are based on potential scenarios, on the assumption of a continuation of current industrial practices, in the absence of breakthroughs, while taking into account, where relevant, changes

	Areva installations	EDF installations (current fleet)	CEA civilian installations (decommissioning to 2050)	defense installations
ILW-LL	1,000 - 3,000	5,000	1,000	0
LLW-LL	0	2,500	0	5,100
LILW-SL	55,000	260,000	24,000	25,500
VLLW	71,000	220,000	120,000	68,000

Table 2.
Overall evaluation of waste arisings from decommissioning beyond 2020.

already planned for. Beyond 2020, the Inventory sets out the amounts of spent fuel to be discharged by existing reactors, up to the end of service life, for each reactor. An initial, overall, estimate of waste from decommissioning as generated beyond 2020 is also presented; this will call for further refinement over successive editions (see Table 2).

The findings from predictive assessments show that the rise in waste volume is under control, and proceeds at a pace that is slower, as a whole, than in earlier years, as a result of the drive to bring volumes down, carried out by producers in the 1990s. The only significant increase, looking forward, will be due to the decommissioning of older installations, which will generate major volumes of VLLW (see Table 3).

	extant volumes 2002 in storage or disposal	predicted volumes 2010 in storage or disposal	predicted volumes 2020 in storage or disposal
HLW	1,639	2,521	3,621
ILW-LL	45,359	50,207	54,509
LLW-LL	44,559	46,581	87,431
LILW-SL	778,322	913,900	1,196,880
VLLW	108,219	247,981	515,991
total	978,098	1,261,190	1,858,432

Table 3.
Evaluation of waste volumes for 2002, 2010, 2020, showing the pace of growth is slower as a whole than in earlier years, the only significant rise being due to the decommissioning of older installations, generating major volumes of VLLW.

An overview of recoverable material

The Inventory also sets out current stocks and predictions for recoverable, usable materials held by the major producers: **depleted uranium**, **reprocessed uranium**, **enriched uranium**, new and spent fuel, civilian-purpose **plutonium**, **thorium**. Most of these so-called “nuclear” materials are already accounted for very precisely by government agencies, on an installation-by-installation basis, under the aegis of non-proliferation controls. The aim is not to duplicate such stocktaking, which is confidential. ANDRA sought to provide an overview, solely with respect to material for civilian use, stocktaking of which is not confidential, to com-



Alpha incinerator for the processing of technological waste from the Valduc center (Côte-d'Or département, Eastern France) of CEA's Military Applications Division.

plement the information on stocks of radioactive materials, going beyond mere waste. This is a novel departure, in a document made available to the public.

The Inventory is being reissued at the beginning of February 2006. This new edition will include a number of new features, or additions, stemming from suggestions made by readers, submitted to ANDRA via the Internet, by conventional mail, or at a symposium held in March 2005. In particular, the effort to survey producers of “diffuse,” small-scale radioactive sources has been carried forward. Waste generated by the entire fleet of current installations, over its full lifespan, will be set out, for the first time, in consolidated form, according to two contrasting scenarios: termination, or continuation of nuclear power generation. Breakdown of waste by owner will also be provided for the first time.

The four-year contract firmed up between the French state and ANDRA provides for publication of the Inventory every three years. The public debate, organized end 2005–early 2006, on radioactive waste management was an opportunity to find out that this work was now seen as the reference by all participants, of whichever persuasion. Publication of this work on a regular basis should enable everyone, over succeeding editions, to track changes in quantities and types of waste, and thus become acquainted with the concrete results of French radioactive waste management policy.

> Arnaud Grévoz
Andra
Châtenay-Malabry

A What is radioactive waste?

According to the **International Atomic Energy Agency (IAEA)**, **radioactive waste** may be defined as “any material for which no use is foreseen and that contains **radionuclides** at concentrations greater than the values deemed admissible by the competent authority in materials suitable for use not subject to control.” French law in turn introduces a further distinction, valid for nuclear waste as for any other waste, between waste and final, or “ultimate,” waste (*déchets ultimes*). Article L. 541-1 of the French Environmental Code thus specifies that “may be deemed as waste any residue from a process of production, transformation or use, any substance, material, product, or, more generally, any movable property left derelict or that its owner intends to leave derelict,” further defining as ultimate “waste, be it the outcome of waste treatment or not, that is not amenable to further treatment under prevailing technological and economic conditions, in particular by extraction of the recoverable, usable part, or mitigation of its polluting or hazardous character.”

Internationally, experts from IAEA and the **Nuclear Energy Agency (NEA)** – an OECD organization – as those in the **European Commission** find that long-lived waste produced in countries operating a nuclear power program is stored securely nowadays, whilst acknowledging a final solution is required, for the long-term management of such waste. They consider burial in deep geological structures appears, presently, to be the safest way to achieve final disposal of this type of waste.

What constitutes radioactive waste? What are the volumes currently involved?

Radioactive waste is classified into a number of categories, according to its level of radioactivity, and the radioactive **period**, or **half-life**, of the radionuclides it contains. It is termed **long-lived waste** when that period is greater than 30 years, **short-lived waste** otherwise. The French classification system involves the following categories:

- **very-low-level waste (VLLW)**; this contains very small amounts of radionuclides, of the order of 10–100 Bq/g (**becquerels** per gram), which precludes considering it as conventional waste;
- **short-lived low and intermediate level waste (LILW-SL)**; radioactivity levels for such waste lie as a rule in a range from

a few hundred to one million Bq/g, of which less than 10,000 Bq/g is from long-lived radionuclides. Its radioactivity becomes comparable to natural radioactivity in less than three hundred years. Production of such waste stands at some 15,000 m³ per year in France;

- **long-lived low-level waste (LLW-LL)**; this category includes radium-bearing waste from the extraction of **rare earths** from radioactive ore, and graphite waste from first-generation reactors;

- **long-lived intermediate-level waste (ILW-LL)**, this being highly disparate, whether in terms of origin or nature, with an overall stock standing, in France, at 45,000 m³ at the end of 2004. This mainly comes from **spent fuel** assemblies (cladding **hulls** and **end-caps**), or from operation and maintenance of installations; this includes, in particular, waste conditioned during spent fuel reprocessing operations (as from 2002, this type of waste is compacted, amounting to some 200 m³ annually), **technological waste** from the operation or routine maintenance of production or fuel-processing plants, from nuclear reactors or from research centers (some 230 m³ annually), along with sludges from effluent treatment (less than 100 m³ annually). Most such waste generates little heat, however some waste of this type is liable to release gases;

- **high-level waste (HLW)**, containing **fission products** and **minor actinides** partitioned during spent fuel reprocessing (see Box B), and incorporated at high temperature into a glass **matrix**. Some 120 m³ of “nuclear glass” is thus cast every year. This type of waste bears the major part of radioactivity (over 95%), consequently it is the seat of considerable heat release, this remaining significant on a scale of several centuries.

Overall, radioactive waste conditioned in France amounts to less than 1 kg per year, per capita. That kilogram consists, for over 90%, of LILW-SL type waste, bearing but 5% of total radioactivity; 9% of ILW-LL waste, less than 1% HLW, and virtually no LLW-LL waste.

What of the waste of tomorrow?

From 1991, **ANDRA** compiled, on a yearly basis, a geographical inventory of waste present on French territory. In 2001, ANDRA was asked by government to augment this “National Inventory,” with the threefold aim of characterizing extant stocks (state of conditioning, processing

traceability), predicting future waste production trends to 2020, and informing the public (see *An inventory projecting into the future*). ANDRA published this reference National Inventory at the end of 2004. To meet requirements for research in compliance with the directions set out in the French Act of 30 December 1991 (see *Radioactive waste management research: an ongoing process of advances*), ANDRA, in collaboration with waste producers, has drawn up a Dimensioning Inventory Model (MID: *Modèle d’inventaire de dimensionnement*), for the purposes of arriving at estimates of the volume of waste packages to be taken on board in research along direction 2 (**disposal**). This model, including as it does predictions as to overall radioactive waste arisings from the current reactor fleet, over their entire lifespan, seeks to group waste types into families, homogeneous in terms of characteristics, and to formulate the most plausible hypotheses, with respect to conditioning modes, to derive the volumes to be taken on board for the purposes of the investigation. Finally, MID sets out to provide detailed stocktaking, intended to cover waste in the broadest possible fashion. MID (not to be confused with the National Inventory, which has the remit to provide a detailed account of actual waste currently present on French territory) thus makes it possible to bring down the variety of package families to a limited number of representative objects, and to specify the requisite margins of error, to ensure the design and assessment of disposal safety will be as robust as feasible, with respect to possible future variations in data.

To ensure consistency between investigations carried out in accordance with direction 2 and those along direction 3 (**conditioning and long-term storage**), CEA adopted MID as input data. MID subsumes waste packages into standard package types, then computes the number and volume of HLW and ILW-LL packages, according to a number of scenarios, all based on the assumption that current nuclear power plants will be operated for 40 years, their output plateauing at 400 TWh per year.

Table 1 shows the numbers and volumes for each standard package type, for the scenario assuming a continuation of current strategy, with respect to spent fuel reprocessing: reprocessing of 79,200 **UOX** fuel **assemblies** and storage of 5,400 **MOX**

MID standard package types	Symbols	Producers	Categories	Number	Volume (m ³)
Vitrified waste packages	CO — C2	Cogema*	HLW	42,470	7,410
Activated metal waste packages	B1	EDF	ILW-LL	2,560	470
Bituminized sludge packages	B2	CEA, Cogema*	ILW-LL	105,010	36,060
Cemented technological waste packages	B3	CEA, Cogema*	ILW-LL	32,940	27,260
Cemented hull and end-cap packages	B4	Cogema*	ILW-LL	1,520	2,730
Compacted structural and technological waste packages	B5	Cogema*	ILW-LL	39,900	7,300
Containerized loose structural and technological waste packages	B6	Cogema*	ILW-LL	10,810	4,580
Total B				192,740	78,400
Total overall				235,210	85,810

* renamed Areva NC in 2006

Table 1.

Amounts (number, and volume) of waste packages, as predicted in France for 40 years' operation of the current fleet of reactors, according to ANDRA's Dimensioning Inventory Model (MID).

assemblies discharged from the current PWR fleet, when operated over 40 years.

What forms does it come in?

Five types of generic packages (also found in MID) may be considered:

- **cementitious waste packages:** ILW-LL waste packages employing hydraulic-binder based materials as a conditioning matrix, or as an immobilizing grout, or yet as a container constituent;
- **bituminized sludge packages:** LLW and ILW-LL waste packages, in which bitumen is used as confinement matrix for low- and intermediate-level residues from treatment of a variety of liquid effluents (fuel processing, research centers, etc.);
- **standard compacted waste packages** (CSD-C: *colis standard de déchets compactés*): ILW-LL packages obtained through compaction conditioning of structural waste from fuel assemblies, and technological waste from the La Hague workshops;
- **standard vitrified waste packages** (CSD-V: *colis standard de déchets vitrifiés*):

HLW packages, obtained mainly through vitrification of highly active solutions from spent fuel reprocessing;

- spent fuel packages: packages consisting in nuclear fuel assemblies discharged from reactors; these are not considered to be waste in France.

The only long-lived waste packages to be generated in any significant amounts by current electricity production (see Box B) are vitrified waste packages and standard compacted waste packages, the other types of packages having, for the most part, already been produced, and bearing but a small part of total radioactivity.

What is happening to this waste at present? What is to be done in the long term?

The goal of long-term radioactive waste management is to protect humankind and its environment from the effects of the materials comprised in this waste, most importantly from radiological hazards. Any release or dissemination of radioactive

materials must thus be precluded, through the lasting isolation of such waste from the environment. This management is guided by the following principles: to produce as little waste as practicable; limit its hazardous character as far as feasible; take into account the specific characters of each category of waste; and opt for measures that will minimize the burden (monitoring, maintenance) for future generations.

As for all nuclear activities subject to control by the French Nuclear Safety Authority (*Autorité de sûreté nucléaire*), fundamental safety regulations (RFSs: *règles fondamentales de sûreté*) have been drawn up with respect to radioactive waste management: sorting, volume reduction, package confinement potential, manufacturing method, radionuclide concentration. RFS III-2.f, in particular, specifies the conditions to be met for the design of, and demonstration of safety for an underground repository, and thus provides a basic guide for disposal investigations. Industrial solutions (see *Industrial solutions for all low-level waste*) are currently available for high on 85% (by volume) of waste, i.e. VLLW and LILW-SL waste. A solution for LLW-LL waste is the subject of ongoing investigation by ANDRA, at the behest of waste producers. ILW-LL and HLW waste, containing radionuclides having very long half-lives (in some cases, greater than several hundred thousand years) are currently held in storage installations coming under the control of the Nuclear Safety Authority. What is to become of this waste in the long term, beyond this storage phase, is what the Act of 30 December 1991 addresses (see Table 2).

For all of these waste types, the French Nuclear Safety Authority is drawing up a National Radioactive Waste Management Plan, specifying, for each type, a management pathway.

	Short-lived Half-life < 30 years for the main elements	Long-lived Half-life > 30 years
Very-low-level waste (VLLW)	Morvilliers dedicated disposal facility (open since 2003) Capacity: 650,000 m ³	
Low-level waste (LLW)	Aube Center (open since 1992) Capacity: 1 million m ³	Dedicated disposal facility under investigation for radium-bearing waste (volume: 100,000 m ³) and graphite waste (volume: 14,000 m ³)
Intermediate-level waste (ILW)		MID volume estimate: 78,000 m ³
High-level waste (HLW)	MID volume estimate: 7,400 m ³	

Table 2.

Long-term management modes, as currently operated, or planned, in France, by radioactive waste category. The orange area highlights those categories targeted by investigations covered by the Act of 30 December 1991.

■ (1) According to the Dimensioning Inventory Model (MID)

B Waste from the nuclear power cycle

Most high-level (high-activity) **radio-active waste (HLW)** originates, in France, in the irradiation, inside nuclear power reactors, of **fuel** made up from **enriched uranium oxide (UOX)** pellets, or also, in part, from mixed **uranium** and **plutonium** oxide (**MOX**). Some 1,200 tonnes of **spent fuel** is discharged annually from the fleet of 58 **pressurized-water reactors (PWRs)** operated by **EDF**, supplying over 400 **TWh** per year, i.e. more than three quarters of French national power consumption.

The fuel's composition alters, during its irradiation inside the reactor. Shortly after discharge, fuel elements contain, on average,⁽¹⁾ some 95% residual uranium, 1% plutonium and other **transuranic elements** – up to 0.1% – and 4% of products yielded by **fission**. The latter exhibit very significant radioactivity levels – to the extent this necessitates management safety measures requiring major industrial resources – of some 10¹⁷ **Bq** per tonne of initial uranium (tiU) (see Figure 1). The **uranium** found in spent fuel exhibits a makeup that is obviously different from that of the initial fuel. The greater the irradiation, the higher the consumption of **fissile** nuclei, and consequently the greater the extent by which the **uranium** will have been **depleted** of the fissile **isotope** ²³⁵U. Irradiation conditions usually prevailing in reactors in the French fleet, with an average fuel residence time inside the reactor of some 4 years, for a

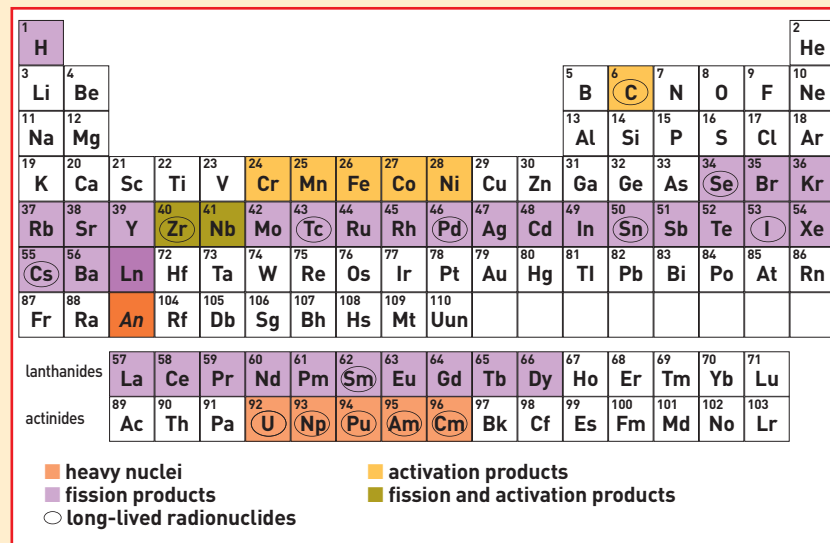


Figure 1.
The main elements found in spent nuclear fuel.

burnup rate close to 50 **GWd/t**, result in bringing down final ²³⁵U content to a value quite close to that of **natural uranium** (less than 1%), entailing an energy potential very close to the latter's. Indeed, even though this uranium remains slightly richer in the fissile isotope than natural uranium, for which ²³⁵U content stands at 0.7%, the presence should also be noted, in smaller, though significant, amounts, of other isotopes having adverse effects in neutronic or radiological terms (²³²U, ²³⁶U), that had not figured in the initial fuel (see Table 1).

The **plutonium** present in spent fuel is yielded by successive **neutron capture** and **decay** processes. Part of the Pu is dissipated through fission: thus about one third of the energy generated is yielded by "in situ recycling" of this element. These processes further bring about the formation of **heavy nuclei**, involving, whether directly themselves, or through their daughter products, long **radioactive half-lives**. These are the elements of the **actinide** family, this including, essentially, plutonium (from ²³⁸Pu to ²⁴²Pu, the odd-numbered isotopes generated in part undergoing fission themselves during irradiation), but equally neptunium (Np), americium (Am), and curium (Cm), known as **minor actinides (MAs)**, owing to the

(1) These figures should be taken as indicative values. They allow orders of magnitude to be pinpointed for enriched-uranium oxide fuel, taken from the main current French nuclear power pathway; they do depend, however, on a number of parameters, such as initial fuel composition and irradiation conditions, particularly irradiation time.

element	isotope	half-life (years)	UOX 33 GWd/tiU (E ²³⁵ U: 3.5%)		UOX 45 GWd/tiU (E ²³⁵ U: 3.7%)		UOX 60 GWd/tiU (E ²³⁵ U: 4.5%)		MOX 45 GWd/tihm (Ei Pu: 8.65%)	
			isotope content (%)	quantity (g/tiU)	isotope content (%)	quantity (g/tiU)	isotope content (%)	quantity (g/tiU)	isotope content (%)	quantity (g/tihm)
U	234	246,000	0.02	222	0.02	206	0.02	229	0.02	112
	235	7.04·10 ⁸	1.05	10,300	0.74	6,870	0.62	5,870	0.13	1,070
	236	2.34·10 ⁷	0.43	4,224	0.54	4,950	0.66	6,240	0.05	255
	238	4.47·10 ⁹	98.4	941,000	98.7	929,000	98.7	911,000	99.8	886,000
Pu	238	87.7	1.8	166	2.9	334	4.5	590	3.9	2,390
	239	24,100	58.3	5,680	52.1	5,900	48.9	6,360	37.7	23,100
	240	6,560	22.7	2,214	24.3	2,760	24.5	3,180	32	19,600
	241	14.4	12.2	1,187	12.9	1,460	12.6	1,640	14.5	8,920
	242	3.75·10 ⁵	5.0	490	7.8	884	9.5	1,230	11.9	7,300

Table 1.
Major actinide inventory for spent UOX and MOX fuel after 3 years' cooling, for a variety of enrichment and burnup rates. Burnup rate and quantity are expressed per tonne of initial uranium (tiU) for UOX, per tonne of initial heavy metal (tihm) for MOX.

B (next)

lesser abundance of these elements, compared with that of U and Pu, the latter being termed **major actinides**.

Activation processes affecting nuclei of non-radioactive elements mainly involve structural materials, i.e. the materials of the tubes, grids, plates and end-fittings that ensure the mechanical strength of nuclear fuel. These materials lead, in particular, to formation of **carbon 14** (^{14}C), with a half-life of 5,730 years, in amounts that are however very low, much less than one gram per tonne of initial uranium (g/tiU) in usual conditions.

It is the *products yielded by fission* of the initial uranium 235, but equally of the Pu generated (isotopes 239 and 241), known as **fission products (FPs)**, that are the essential source of the radioactivity of spent fuel, shortly after discharge. Over 300 **radionuclides** – two thirds of which however will be dissipated through radioactive decay in a few years, after irradiation – have been identified. These radionuclides are distributed over some 40 elements in the periodic table, from germanium (^{32}Ge) to dysprosium (^{66}Dy), with a presence of **tritium from fission**, i.e. from the fission into three fragments (ternary fission) of ^{235}U . They are thus characterized by great diversity: diverse radioactive properties, involving as they do some highly radioactive nuclides having very



Magnum/Harry Gruyaert

After discharge, spent fuel is stored in cooling pools, to allow its radioactivity to come down significantly. Shown here is a storage pool at Areva's spent fuel reprocessing plant at La Hague.

family	UOX 33 GWd/tiU (E ^{235}U : 3.5%)	UOX 45 GWd/tiU (E ^{235}U : 3.7%)	UOX 60 GWd/tiU (E ^{235}U : 4.5%)	MOX 45 GWd/tiU (Ei Pu: 8.65%)
	quantity (kg/tiU)	quantity (kg/tiU)	quantity (kg/tiU)	quantity (kg/tiU)
rare gases (Kr, Xe)	5.6	7.7	10.3	7
alkali metals (Cs, Rb)	3	4	5.2	4.5
alkaline-earth metals (Sr, Ba)	2.4	3.3	4.5	2.6
Y and lanthanides	10.2	13.8	18.3	12.4
zirconium	3.6	4.8	6.3	3.3
chalcogens (Se, Te)	0.5	0.7	1	0.8
molybdenum	3.3	4.5	6	4.1
halogens (I, Br)	0.2	0.3	0.4	0.4
technetium	0.8	1.1	1.4	1.1
Ru, Rh, Pd	3.9	5.7	7.7	8.3
miscellaneous: Ag, Cd, Sn, Sb...	0.1	0.2	0.3	0.6

Table 2.
Breakdown by chemical family of fission products in spent UOX and MOX fuel, after 3 years' cooling, for a variety of enrichment and burnup rates.

short lifespans, and conversely others having radioactive half-lives counted in millions of years; and diverse chemical properties, as is apparent from the analysis, for the "reference" fuels used in PWRs in the French fleet, of the breakdown of FPs generated, by families in the periodic table (see Table 2). These FPs, along with the actinides generated, are, for the most part, present in the form of oxides included in the initial uranium oxide, which remains by far the majority constituent. Among some notable exceptions may be noted iodine (I), present in the form of **cesium iodide**, rare gases, such as krypton (Kr) and xenon (Xe), or certain **noble metals**, including ruthenium (Ru), rhodium (Rh), and palladium (Pd), which may form metallic inclusions within the oxide matrix.

Pu is **recycled** nowadays in the form of MOX fuel, used in part of the fleet (some 20 reactors currently). Residual U may in turn be re-enriched (and recycled as a substitute for mined uranium). Recycling intensity depends on market prices for natural uranium, the recent upturn in which should result in raising the current recycling rate (about one third being recycled at present).

Such U and Pu recycling is the foundation for the **reprocessing** strategy currently implemented in France, for the major part of spent fuel (some two thirds currently).

For the 500 kg or so of U initially contained in every fuel element, and after partitioning of 475 kg of residual U and about 5 kg Pu, this "**ultimate**" waste amounts to less than 20 kg of FPs, and less than 500 grams MAs. This waste management pathway (otherwise known as the **closed cycle**), consisting as it does in reprocessing spent fuel now, to partition recoverable materials and ultimate waste, differs from strategies whereby spent fuel is conserved as-is, whether this be due to a wait-and-see policy (pending a decision on a long-term management model), or to a so-called **open cycle** policy, whereby spent fuel is considered to be waste, and designated for **conditioning** into **containers**, and **disposal** as-is.

In the nuclear power cycle, as it is implemented in France, waste is subdivided into two categories, according to its origin. Waste directly obtained from spent fuel is further subdivided into **minor actinides and fission products**, on the one hand, and **structural waste**, comprising **hulls** (segments of the cladding tubes that had held the fuel for PWRs) and **end-caps** (fittings forming the end-pieces of the fuel assemblies for these same PWRs), on the other hand. The process used for spent fuel reprocessing, to extract U and Pu, also generates **technological waste** (operational waste, such as spare parts, protection gloves...) and **liquid effluents**.

c What stands between waste and the environment?

Raw, solid or liquid **radioactive waste** undergoes, after characterization (determination of its chemical and radiological makeup, and of its physical-chemical properties), **conditioning**, a term covering all the operations consisting in bringing this waste (or spent **fuel assemblies**) to a form suitable for its transport, **storage**, and **disposal** (see Box D). The aim is to put radioactive waste into a solid, physically and chemically stable form, and ensure effective, lasting confinement of the **radionuclides** it contains. For that purpose, two complementary operations are carried out. As a rule, waste is immobilized by a material – whether by encapsulation or homogeneous incorporation (liquid or powdered waste, sludges), or encasing (solid waste) – within a **matrix**, the nature of, and performance specification for which depend on waste type (cement for sludges, evaporation concentrates and incineration ashes; bitumen for **encapsulation** of sludges or evaporation concentrates from liquid effluent treatment; or a vitreous matrix, intimately binding the nuclides to the glass network, for **fusion product** or **minor actinide** solutions). This matrix contributes to the confinement function. The waste thus conditioned is placed in an impervious **contai-**



A. Gomin/CEA

Cross-section of an experimental storage borehole for a spent fuel container (the lower part of the assembly may be seen, top right), in the Galatée gallery of CECER (Centre d'expertise sur le conditionnement et l'entreposage des matières radioactives: Radioactive Materials Conditioning and Storage Expertise Center), at CEA's Marcoule Center, showing the nested canisters.

ner (cylindrical or rectangular), consisting in one or more **canisters**. The whole – container and content – is termed a **package**. Equally, waste may be compacted and mechanically **immobilized** within a canister, the whole forming a package.

When in the state they come in as supplied by industrial production, they are known as **primary packages**, the pri-

mary container being the cement or metal container into which the conditioned waste is ultimately placed, to allow handling. The container may act as initial confinement **barrier**, allotment of functions between matrix and container being determined according to the nature of the waste involved. Thus, the whole obtained by the grouping together, within one container, of a number of primary

c (next)

ILW-LL packages may ensure confinement of the radioactivity of this type of waste. If a **long-term storage** stage is found to be necessary, beyond the stage of industrial storage on the premises of the producers, primary waste packages must be amenable to retrieval, as and when required: durable primary containers must then be available, in such conditions, for all types of waste.

In such a case, for spent fuel assemblies which might at some time be earmarked for such long-term storage, or even for disposal, it is not feasible to demonstrate, on a timescale of centuries, the integrity of the cladding holding the fuel, forming the initial confinement barrier during the in-reactor use stage. Securing these assemblies in individual, impervious cartridges is thus being considered, this stainless-steel **cartridge** being compatible with the various possible future management stages: **treatment**, return to storage, or disposal. Placing these cartridges inside impervious containers ensures a second confinement barrier, as is the case for **high-level** waste packages.

In storage or disposal conditions, the waste packages will be subjected to a variety of aggressive agents, both internal and external. First, radionuclide

radioactive decay persists inside the package (**self-irradiation** process). Emission of radiation is concomitant with heat generation. For example, in confinement glasses holding high-**activity** (high-level) waste, the main sources of irradiation originate in the **alpha decay** processes from **minor actinides**, **beta decay** from **fission products**, and gamma transitions. Alpha decay, characterized by production of a **recoil nucleus**, and emission of a particle, which, at the end of its path, yields a helium atom, causes the major part of atom displacements. In particular, recoil nuclei, shedding considerable energy as they do over a short distance, result in atom displacement cascades, thus breaking large numbers of chemical bonds. This is thus the main cause of potential long-term damage. In such conditions, matrices must exhibit thermal stability, and irradiation-damage resistance.

Stored waste packages will also be subjected to the effects of water (**leaching**). Container canisters may exhibit a degree of resistance to corrosion processes (the **overpacks** contemplated for glasses may thus delay by some 4,000 years the arrival of water), and the confinement matrices must be proven to exhibit high chemical stability.

Between the containers and the ultimate barrier provided, in a radioactive waste deep disposal facility, by the geological environment itself, there may further be interposed, apart, possibly, from an overpack, other barriers, so-called **engineered barriers**, for backfill and sealing purposes. While these would be pointless as backfill in clay formations, they would have the capability, in other environments (granite), of further retarding any flow of radionuclides to the **geosphere**, notwithstanding degradation of the previously mentioned barriers.



Technological demonstrators of ILW-LL packages for bituminized sludges.

D From storage to disposal

The object of nuclear waste **storage** and **disposal** is to ensure the long-term **confinement** of **radioactivity**, in other words to contain **radionuclides** within a definite space, segregated from humankind and the environment, as long as required, so that the possible return to the **biosphere** of minute amounts of radionuclides can have no unacceptable health or environmental impact.

According to the Joint Convention on the Safety of Spent Fuel Management and on the Safety of Radioactive Waste Management, signed on 5 September 1997, "storage" means "the holding of spent fuel or of radioactive waste in a facility that provides for its containment, with the intention of retrieval." This is thus, by definition, an interim stage, amounting to a delaying, or wait-and-see solution, even though this may be for a very long time (from a few decades to several hundred years), whereas disposal may be final.

Used from the outset of the nuclear power age, industrial storage keeps spent fuel awaiting reprocessing, and conditioned **high-level waste (HLW)**, or **long-lived intermediate-level waste**

(**ILW-LL**) in conditions of safety, pending a long-term management mode for such waste. Retrieval of stored packages is anticipated, after a period of limited duration (i.e. after a matter of



CEA design study for a common container for the long-term storage and disposal of long-lived, intermediate-level waste.

years, or tens of years).


Long-term storage (LTS) may be contemplated, in particular, in the event of the deferred deployment of a disposal facility, or of reactors to carry out

recycling-transmutation, or simply to turn to advantage the natural decay of radioactivity (and hence the falling off of heat release from high-level waste), before putting the waste into **geological disposal**. By "long term" is meant a timespan of up to 300 years. Long-term storage may take place in a **surface** or **sub-surface** facility. In the former case, the site may be protected, for instance, by a reinforced-concrete structure. In the latter case, it will be located at a depth of some tens of meters, and protected by a natural environment (for instance, if buried in a hill-side) and its host rock.

Whichever management strategy is chosen, it will be imperative to protect the biosphere from the residual ultimate waste. The nature of the radioelements the latter contains means a solution is required that has the ability to ensure their confinement over several tens of thousand years, in the case of long-lived waste, or even longer. On such timescales, social stability is a major uncertainty that has to be

taken on board. Which is why disposal in deep geological strata (typically, 500 m down) is seen as a reference solution, insofar as it inherently makes for deployment of a more passive technical solution, with the ability to stand, with no increased risk, an absence of surveillance, thus mitigating a possible loss of memory on the part of society. The geological environment of such a disposal facility thus forms a further, essential barrier, which does not exist in the storage case.

A disposal facility may be designed to be **reversible** over a given period. The concept of reversibility means the design must guarantee the ability, for a variety of reasons, to access the **packages**, or even to take them out of the facility, over a certain timespan, or to opt for the final closure of the disposal facility. Such reversibility may be envisaged as a succession of stages, each affording a decreasing "level of reversibility." To simplify, each stage consists in carrying out one further technical operation bringing the facility closer to final closure, making retrieval more difficult than at the previous stage, according to well-specified criteria.

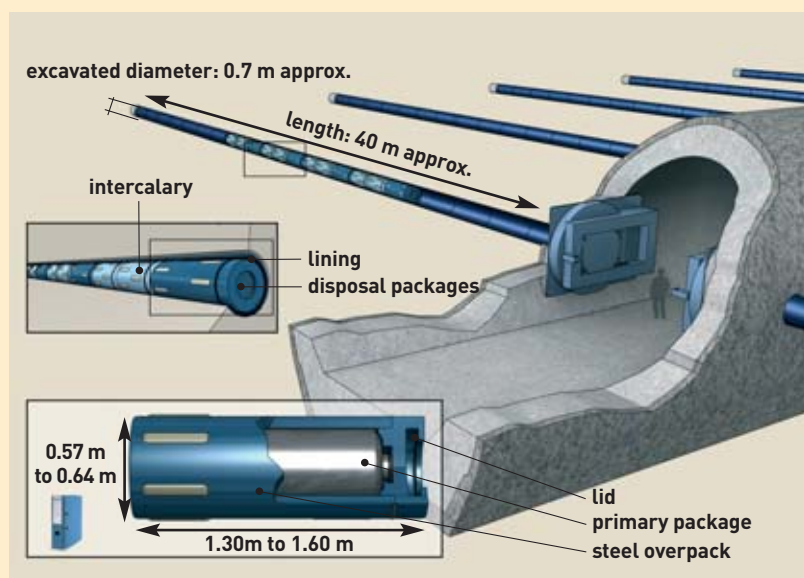

ANDRA design for the disposal of standard vitrified waste packages in horizontal galleries, showing in particular the packages' various canisters, and some characteristics linked to potential reversibility of the disposal facility.

E What is transmutation?

Transmutation is the transformation of one nucleus into another, through a reaction induced by particles with which it is bombarded. As applied to the treatment of nuclear waste, this consists in using that type of reaction to transform **long-lived radioactive isotopes** into isotopes having a markedly shorter life, or even into stable isotopes, in order to reduce the long-term **radiotoxic** inventory. In theory, the projectiles used may be **photons, protons, or neutrons**.

In the first case, the aim is to obtain, by bremsstrahlung,⁽¹⁾ through bombardment of a target by a beam of electrons, provided by an accelerator, photons able to bring about reactions of the (γ, xn) type. Under the effects of the incoming **gamma** radiation, x neutrons are expelled from the nucleus. When applied to substances that are too rich in neutrons, and hence unstable, such as certain **fission products** (strontium 90, cesium 137...), such reactions yield, as a rule, stable substances. However, owing to the very low efficiency achieved, and the very high electron current intensity required, this path is not deemed to be viable.

In the second case, the proton-nucleus interaction induces a complex reaction, known as **spallation**, resulting in fragmentation of the nucleus, and the release

of a number of particles, including high-energy neutrons. Transmutation by way of *direct* interaction between protons is uneconomic, since this would involve, in order to overcome the Coulomb barrier,⁽²⁾ very-high-energy protons (1–2 **GeV**), requiring a generating energy greater than had been obtained from the process that resulted in producing the waste. On the other hand, *indirect* transmutation, using very-high-energy neutrons (of which around 30 may be yielded, depending on target nature and incoming proton energy), makes it possible to achieve very significantly improved performance. This is the path forming the basis for the design of so-called **hybrid reactors**, coupling a **subcritical** core and a high-intensity proton accelerator (see Box F, *What is an ADS?*).

The third particle that may be used is thus the neutron. Owing to its lack of electric charge, this is by far the particle best suited to meet the desired criteria. It is “naturally” available in large quantities inside nuclear reactors, where it is used to trigger **fission** reactions, thus yielding energy, while constantly inducing, concurrently, transmutations, most of them unsought. The best **recycling** path for waste would thus be to reinject it in the very installation, more or less, that had produced it...

When a neutron collides with a nucleus, it may bounce off the nucleus, or penetrate it. In the latter case, the nucleus, by absorbing the neutron, gains excess energy, which it then releases in various ways:

- by expelling particles (a neutron, e.g.), while possibly releasing radiation;
- by solely emitting radiation; this is known as a *capture reaction*, since the neutron remains captive inside the nucleus;
- by breaking up into two nuclei, of more or less equal size, while releasing concurrently two or three neutrons; this is known as a *fission reaction*, in which considerable amounts of energy are released.

Transmutation of a **radionuclide** may be achieved either through neutron capture or by fission. **Minor actinides**, as elements having large nuclei (**heavy nuclei**), may undergo both fission and capture reactions. By fission, they transform into radionuclides that, in a majority of cases, are short-lived, or even into stable nuclei. The nuclei yielded by fission (known as fission products), being smaller, are only the seat of capture reactions, undergoing, on average, 4 radioactive decays, with a **half-life** not longer than a few years, as a rule, before they reach a stable form. Through capture, the same heavy nuclei transform into other radionuclides, often long-lived, which transform in turn through natural decay, but equally through capture and fission.

(1) From the German for “braking radiation.” High-energy photon radiation, yielded by accelerated (or decelerated) particles (electrons) following a circular path, at the same time emitting braking photons tangentially, those with the highest energies being emitted preferentially along the electron beam axis.

(2) A force of repulsion, which resists the drawing together of same-sign electric charges.

E (next)

The probability, for a neutron, of causing a capture or a fission reaction is evaluated on the basis, respectively, of its capture **cross-section** and fission cross-section. Such cross-sections depend on the nature of the nucleus (they vary considerably from one nucleus to the next, and, even more markedly, from one isotope to the next for the same nucleus) and neutron energy.

For a neutron having an energy lower than 1 **eV** (in the range of slow, or thermal, neutrons), the capture cross-section

prevails; capture is about 100 times more probable than fission. This remains the case for energies in the 1 eV–1 **MeV** range (i.e., that of **epithermal neutrons**, where captures or fissions occur at definite energy levels). Beyond 1 MeV (fast neutron range), fissions become more probable than captures.

Two reactor pathways may be considered, according to the neutron energy range for which the majority of fission reactions occur: **thermal-neutron** reactors, and **fast-neutron** reactors. The ther-

mal neutron pathway is the technology used by France for its power generation equipment, with close to 60 pressurized-water reactors. In a thermal-neutron reactor, neutrons yielded by fission are slowed down (moderated) through collisions against light nuclei, making up materials known as moderators. Due to the moderator (common water, in the case of pressurized-water reactors), neutron velocity falls off, down to a few kilometers per second, a value at which neutrons find themselves in thermal equilibrium with the ambient environment. Since fission cross-sections for ^{235}U and ^{239}Pu , for fission induced by thermal neutrons, are very large, a concentration of a few per cent of these fissile nuclei is sufficient to sustain the cascade of fissions. The flux, in a thermal-neutron reactor, is of the order of 1018 neutrons per square meter, per second.

In a fast-neutron reactor, such as Phénix, neutrons yielded by fission immediately induce, without first being slowed down, further fissions. There is no moderator in this case. Since, for this energy range, cross-sections are small, a fuel rich in fissile radionuclides must be used (up to 20% uranium 235 or plutonium 239), if the neutron multiplication factor is to be equal to 1. The flux in a fast-neutron reactor is ten times larger (of the order of 1019 neutrons per square meter, per second) than for a thermal-neutron reactor.

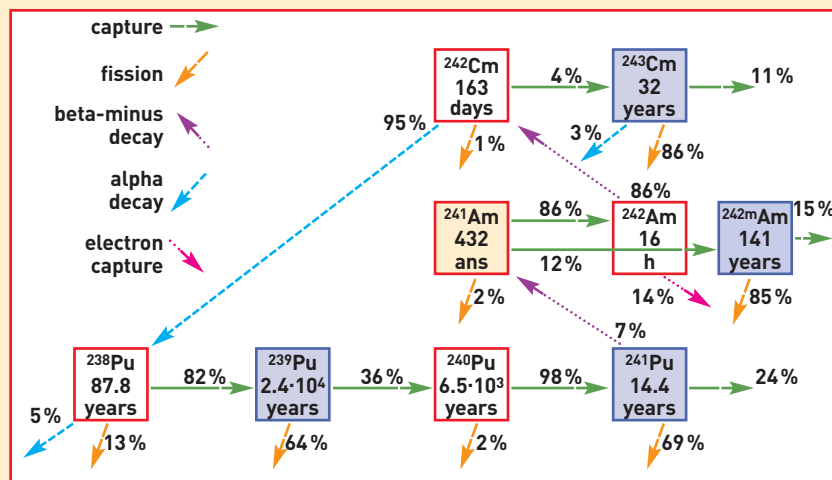


Figure.

Simplified representation of the evolution chain of americium 241 in a thermal-neutron reactor (shown in blue: radionuclides disappearing through fission). Through capture, ^{241}Am transforms into ^{242}Am , this disappearing predominantly through fission, and into ^{243}Am , which mainly decays (with a half-life of 16 hours) through beta decay into ^{242}Cm . ^{242}Cm transforms through alpha decay into ^{238}Pu , and through capture into ^{243}Cm , which itself disappears predominantly through fission. ^{238}Pu transforms through capture into ^{239}Pu , which disappears predominantly through fission.


F What is an ADS?

An **ADS** (accelerator-driven system) is a **hybrid system**, comprising a nuclear reactor operating in **subcritical** mode, i.e. a reactor unable by itself to sustain a **fission chain reaction**, “driven” by an external source, having the ability to supply it with the required complement of **neutrons**.⁽¹⁾

Inside the core of a nuclear reactor, indeed, it is the fission energy from **heavy nuclei**, such as **uranium 235** or **plutonium 239**, that is released. Uranium 235 yields, when undergoing fission, on average 2.5 neutrons, which can in turn induce a further fission, if they collide with a uranium 235 nucleus. It may thus be seen that, once the initial fission

is initiated, a chain reaction may develop, resulting, through a succession of fissions, in a rise in the neutron population. However, of the 2.5 neutrons yielded by the initial fission, some are captured, thus not giving rise to further fissions. The number of fissions generated from one initial fission is characterized by the **effective multiplication factor** k_{eff} , equal to the ratio of the number of fission neutrons generated, over the number of neutrons disappearing. It is on the value of this coefficient that the evolution of the neutron population depends: if k_{eff} is markedly higher than 1, the population increases rapidly; if it is slightly higher than 1, neutron multiplication sets in, but remains under control; this is the state desired at reactor startup; if k_{eff} is equal to 1, the population remains stable; this is the state

for a reactor in normal operating conditions; and, if k_{eff} is lower than 1, the neutron population dwindles, and becomes extinct, unless – as is the case for a hybrid system – an external source provides a neutron supply.

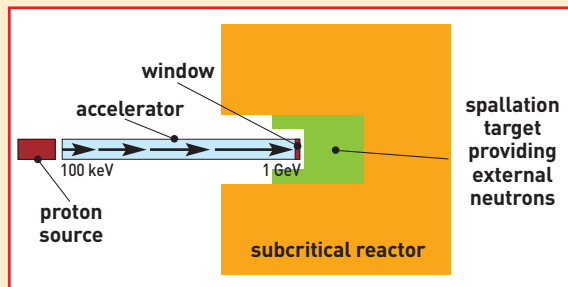

Principle schematic of an ADS.

From the effective multiplication factor, a reactor’s **reactivity** is defined by the ratio $(k_{\text{eff}} - 1)/k_{\text{eff}}$. The condition for stability is then expressed by zero reactivity. To stabilize a neutron population, it is sufficient to act on the proportion of materials exhibiting a large **neutron capture** cross-section (neutron absorber materials) inside the reactor.

In an ADS, the **source** of extra neutrons is fed with **protons**, generated with an energy of about 100 keV, then injected into an accelerator (linear accelerator or cyclotron), which brings them to an energy of around 1 GeV, and directs them to a heavy-metal target (lead, lead-bismuth, tungsten or tantalum). When irradiated by the proton beam, this target yields, through **spallation** reactions, an intense, high-energy (1–20 MeV) neutron flux, one single incoming neutron having the ability to generate up to 30 neutrons. The lat-

ter then go on to interact with the fuel of the subcritical neutron **multiplier medium**, yielding further neutrons (fission neutrons) (see Figure).

Most hybrid system projects use as a core (of annular configuration, as a rule) **fast-neutron** environments, since these make it possible to achieve neutron balances most favorable to **transmutation**, an operation that allows waste to be “burned,” but which may equally be used to yield further **fissile** nuclei. Such a system may also be used for energy generation, even though part of this energy must be set aside to power the proton accelerator, a part that is all the higher, the more subcritical the system is. Such a system is safe in principle from most reactivity accidents, its multiplication factor being lower than 1, contrary to that of a reactor operated in critical mode: the chain reaction would come to a halt, if it was not sustained by this supply of external neutrons.

A major component in a hybrid reactor, the **window**, positioned at the end of the beam line, isolates the accelerator from the target, and makes it possible to keep the accelerator in a vacuum. Traversed as it is by the proton beam, it is a sensitive part of the system: its lifespan depends on thermal and mechanical stresses, and corrosion. Projects are mooted, however, of windowless ADSs. In the latter case, it is the confinement constraints, and those of radioactive spallation product extraction, that must be taken on board.

■ (1) On this topic, see *Clefs CEA*, No. 37, p. 14

The industrial context

1

The characteristics of the major part of the **radioactive waste** generated in France are determined by those of the French nuclear power generation fleet, and of the spent **fuel** reprocessing plants, built in compliance with the principle of reprocessing such fuel, to partition such materials as remain recoverable for energy purposes (**uranium** and **plutonium**), and waste (**fission products** and **minor actinides**), not amenable to recycling in the current state of the art.

58 **enriched-uranium pressurized-water reactors (PWRs)** have been put on stream by French national utility **EDF**, from 1977 (Fessenheim) to 1999 (Civaux), forming a second generation of reactors, following the first generation, which mainly comprised 8 **UNGG** (**natural uranium**, graphite, gas) reactors, now all closed down, and, in the case of the older reactors, in the course of decommissioning. Some 20 of these PWRs carry out the industrial recycling of plutonium, included in **MOX** fuel, supplied since 1995 by the **Melox** plant, at Marcoule (Gard *département*, Southern France).

EDF is contemplating the gradual replacement of the current PWRs by third-generation reactors, belonging to the selfsame pressurized-water reactor pathway, of the **EPR** (European Pressurized-Water Reactor) type, designed by **Areva NP** (formerly **Framatome-ANP**), a division of the **Areva** Group. The very first EPR is being built in Finland, the first to be built in France being sited at Flamanville (Manche *département*, Western France).

The major part of spent fuel from the French fleet currently undergoes reprocessing at the **UP2-800**⁽¹⁾ plant, which has been operated at La Hague (Manche *département*), since 1994, by Areva NC (formerly Cogema,) another member of the Areva Group (the UP3 plant, put on stream in 1990–92, for its part, carries out reprocessing of fuel from other countries). The waste **vitrification** workshops at these plants, the outcome of development work initiated at Marcoule, give their name (**R7T7**) to the “nuclear” glass used for the confinement of **long-lived, high-level** waste.

A fourth generation of reactors could emerge from 2040 (along with new reprocessing plants), a prototype being built by 2020. These could be **fast-neutron** reactors (i.e. fast reactors [**FRs**]), either sodium-cooled (SFRs) or gas-cooled (**GFRs**). Following the closing down of the Superphénix reactor, in 1998, only one FR is operated in France, the Phénix reactor, due to be closed down in 2009.

■ (1) A reengineering of the **UP2-400** plant, which, after the **UP1** plant, at Marcoule, had been intended to reprocess spent fuel from the UNGG pathway.